

QUICK START GUIDE

Thank you for purchase Bio-Well system. We hope it will help you in your professional and personal life.

To begin using your Bio-Well device (hardware & software) you need to:

- Download and install the Bio-Well software;
- Register your personal account;
- Choose and purchase a subscription period;
- Log in and use the Bio-Well software.

1
Step

Software download and installation for the Bio-Well device.

Windows, MAC, and Linux versions of the Bio-Well software are available for download at www.bio-well.com/download, or may be found on the USB drive if included with the device. (**USB drive not available in all regions).

To install the software:

Windows users:

Run the program **Biowell_install.exe**.

MAC users:

Move **biowell.dmg** file into Applications folder.

The program and necessary drivers will be installed.

Note! If a Firewall or Antivirus software running on your computer blocks the installation, pause them for the time of Bio-well installation.

2
Step

Registration of your personal account.

**Internet connection required.

Once the software has been installed, click the **Bio-Well program** icon (or **Bio-Well.exe** file in Windows) to open. When the login window appears, click "**Activate my Bio-Well**".

Bio-Well

English

Login

Password

Remember me [Forgot password?](#)

Login

Don't need to connect?

Don't have an account?

Bio-Well

中文

登录

密码

记住我 [忘记密码?](#)

登录

无需连接?

尚无账号?

You will be redirected to the website

<http://www.bwacc.com/account/login.html>.

Click **"Create one!"** on this page.

Enter your account information and create the **Username** and **Password** which you will use to log in to the software, and your account at Bio-Well.com.

Forgot password?

login

password

Remember me

Login

Don't have an account? [Create one!](#)

3
Step

Bio-Well software subscription.

Log in to your personal account at <http://www.bwacc.com/> with the Username and Password created during the registration process.

Choose the type of subscription, **Manual** or **Automatic** renewal, and number of Months or Annual.

Click the **"PayPal"** button. You will have the option of paying with a PayPal account, or a separate credit card.

Note! Account and subscription is valid for only one (1 pcs) of Bio-Well device .
Each Bio-Well device requires its own account and subscription.

Subscription PRO

Status: Inactive

Renew subscription

Number of months

1 month \$20.00 USD

Pay Now

In order to update the payment information please visit your PayPal account - www.paypal.com

Manual control: If you select this type of payment you will have to prolong your subscription manually each time it expires. Expiry date is demonstrated in the top panel of the Bio-Well software and here in your private cabinet.

You will have the ability to Pause and Resume your subscription. Pausing subscription will save the rest of the paid days and will just move the Expiry date day-by-day.

Bio-Well subscription

Select payment period

12 months \$220.00 USD

Subscribe

Automatic billing: If you select this type of payment then your PayPal account or your assigned bank card will be charged once per month (monthly fee of 20\$) or once per year (yearly fee of 220\$) automatically.

If you click Pause - the date of the next payment will not be altered. You will be charged automatically every month or every year.

At any moment you can cancel the subscription in your PayPal account settings.

Personal information

First name:

Last name:

E-Mail:

Gender:

Birthday:

Country:

Postal code:

State/province:

City:

Street:

Company:

VAT:

Save

** Full information about subscription: <http://www.bio-well.com/gb/activate1.html>

4
Step

Use of the device and software Bio-Well.

Place the Bio-Well device on a flat surface and connect it to your computer with the included USB cable.

Run the **Bio-Well program** and log in using your Username and Password. Click **"Login"**.

For normal operation, an Internet connection is required.

If an Internet connection is not available, choose **"Work Offline"**. Your results will be analyzed and uploaded to your account when an Internet connection is available.

Note! To obtain reliable results, the operating environment temperature must be between +18°C - +32 °C (64°F-87°F), with relative humidity 30% - 70%. Please, check.

User manual and reference materials.

Advanced User Guide, Basic interpretation Guide, Video lessons and other reference information may be found at <http://bio-well.com/resources/>.

